

General Commands

- HOLD THE CHECKLIST
- RESUME THE CHECKLIST
- CANCEL THE CHECKLIST
- SAY LAST PLEASE
- REPEAT LAST PLEASE
- LETS START AGAIN
- RESTART THE CHECKLIST
- LETS RESTART THE CHECKLIST FROM THE BEGINNING
- CONTINUE (optional phrase used during an approach)
- VISUAL (used during an approach. FO will no longer make approach callouts)
- **CANCEL LAST COMMAND** (used if an autopilot value does not stop spinning)
- **SET AND CHECKED** (used if you are unable to reply to a checklist item using the expected syntax)

Misc Commands

- CANCEL EICAS (EYE-CAS)
- THIS IS THE CAPTAIN EVACUATE EVACUATE EVACUATE
- YOU HAVE CONTROL / I HAVE CONTROL
- SET XXX POINT/DECIMAL ON (STANDBY) COMM ½
- SWAP COMM 1/2/3
- SET XXXX ON THE TRANSPONDER
- MANUAL BRAKING
- LEAVE THE FLAPS UP FOR TAXI

Autopilot Value Commands

- SET HEADING XXX (e.g.: *SET HEADING ONE TWO ZERO*)
- SET SPEED XXX (e.g.: *SET SPEED TWO FOUR ZERO*)
- SET FLIGHT LEVEL XXX (e.g.: *SET FLIGHT LEVEL THREE THREE ZERO*)
- SET ALTITUDE XXX (e.g.: *SET ALTITUDE FOUR THOUSAND*)
- SET VERTICAL SPEED UP/DOWN XXXX (e.g.: *SET VERTICAL SPEED UP FIVE HUNDRED; SET VERTICAL SPEED DOWN ONE THOUSAND TWO HUNDRED*).
- SET VREF PLUS XXX (e.g.: *SET VREF PLUS FIVE*)

MCP and EFIS Commands

- AUTOPILOT ON/OFF (PLEASE)
- FLIGHT DIRECTORS ON/OFF (PLEASE)
- RECYCLE THE FLIGHT DIRECTORS (PLEASE)
- AUTO THROTTLE OFF (PLEASE)
- ARM THE AUTO THROTTLES (PLEASE)
- SELECT CLIMB THRUST (PLEASE)
- SELECT MAXIMUM CONTINUOUS THRUST (PLEASE)
- SELECT SPEED INTERVENE (PLEASE)
- SELECT VNAV (PLEASE)
- SELECT LNAV (PLEASE)
- SELECT LEVEL CHANGE (PLEASE)
- SELECT HEADING SELECT (PLEASE)
- SELECT HEADING HOLD (PLEASE)
- SELECT VERTICAL SPEED (PLEASE)
- SELECT FLIGHT PATH ANGLE (PLEASE)
- SELECT ALT HOLD (PLEASE)
- ARM THE LOCALIZER (PLEASE)
- ARM APPROACH (PLEASE)
- SELECT BANK SELECTOR AUTO/10/15/20/25/30

- SELECT ALTITUDE INTERVENE
- LEFT/RIGHT FLIGHT DIRECTOR ON/OFF (PLEASE)
- SET EFIS MODE TO APPROACH
- SET EFIS MODE TO VOR
- SET EFIS MODE TO MAP
- SET EFIS MODE TO PLAN
- DISPLAY WEATHER ON MY SIDE
- DISPLAY STATIONS ON MY SIDE
- DISPLAY WAYPOINTS ON MY SIDE
- DISPLAY AIRPORTS ON MY SIDE
- DISPLAY POSITION ON MY SIDE
- DISPLAY TERRAIN ON MY SIDE

Overhead and Main Panel Commands

- APU ON/OFF (PLEASE)
- WIPERS OFF/LOW/INTERVAL (PLEASE)
- SEAT BELTS SIGNS ON/OFF/AUTO (PLEASE)
- LANDING LIGHTS ON/OFF (PLEASE)
- NOSE LIGHT ON/OFF (PLEASE)
- NAV LIGHTS ON/OFF (PLEASE)
- BEACON ON/OFF (PLEASE)
- ENGINE ANTI ICE ON/OFF/AUTO (PLEASE)
- WING ANTI ICE ON/OFF/AUTO (PLEASE)
- TAXI LIGHT ON/OFF (PLEASE)
- STROBES ON/OFF (PLEASE)
- AUTO BRAKE TO LEVEL ONE/TWO/THREE/FOUR (PLEASE)
- AUTO BRAKE TO MAX AUTO (PLEASE)
- AUTO BRAKE OFF (PLEASE)
- DISARM THE AUTO BRAKE (PLEASE)
- AUTO BRAKE TO RTO (PLEASE)
- CENTER PUMPS ON (PLEASE)
- CENTER PUMPS OFF (PLEASE)
- TURN ON/OFF THE TAXI CAM (PLEASE)
- DOME LIGHT ON/OFF (PLEASE)

EICAS

- DISPLAY ENGINE (PLEASE)
- DISPLAY STATUS (PLEASE)
- DISPLAY ELECTRICAL (PLEASE)
- DISPLAY HYDRAULICS (PLEASE)
- DISPLAY FUEL (PLEASE)
- DISPLAY AIR (PLEASE)
- DISPLAY DOORS (PLEASE)
- DISPLAY GEAR (PLEASE)
- DISPLAY FLIGHT CONTROLS (PLEASE)
- DISPLAY CHECKLIST (PLEASE)
- DISPLAY COMMS (PLEASE)

Missed Approach

- GO AROUND / MISSED APPROACH

Aborted Takeoff

- STOP
- LETS TAXI BACK TO THE RUNWAY

Ground Crew Commands

- COCKPIT TO GROUND / GROUND FLIGHT DECK
- CAN WE PRESSURIZE THE HYDRAULICS?
- PLEASE CONNECT/DISCONNECT THE GPU/EXTERNAL POWER
- PLEASE CONNECT/DISCONNECT THE AIR START UNIT/CART
- PLEASE CONNECT/DISCONNECT THE AIR CONDITIONING UNIT/CART
- PLEASE DISCONNECT THE GROUND EQUIPMENT

Note: There is a CFG option to have the GPU and AC Unit connect automatically during Gate Arrival.

Flight Attendant In Flight Conversations

- ONE COFFEE PLEASE
- ONE TEA PLEASE
- SOME LUNCH PLEASE
- SOME DINNER PLEASE
- SOME BREAKFAST PLEASE
- ONE JUICE PLEASE
- ONE WATER PLEASE
- I WILL KEEP YOU UPDATED
- I WILL KEEP YOU IN THE LOOP
- I WILL KEEP YOU INFORMED

FMA Callouts

- THRUST
- THRUST REF
- HOLD
- IDLE
- SPEED
- HEADING HOLD
- HEADING SELECT
- LNAV
- LOCALIZER
- ROLL OUT
- THRUST TOGA
- THRUST TOGA TOGA
- TRACK SELECT
- TRACK HOLD
- ATT
- VERTICAL SPEED
- VNAV PATH
- VNAV SPEED
- VNAV ALT
- GLIDE SLOPE
- FLARE
- FLARE ARMED
- LEVEL CHANGE SPEED
- FPA
- LAND 2
- LAND 3
- NO AUTOLAND
- AUTOPILOT
- GLIDE SLOPE CAPTURE
- LOCALIZE CAPTURE